

# PANDORA GAME



User Manual

***Home Game Station***  
Professional Design & Reliable Quality



## Preface

- Top class chipset and branded hardware component.
- Design for low power consumption.
- Hundreds of classic arcade games collection.
- Super high definition game resolution and high quality video & audio engine.
- Top ranking game control experience as well as stable performance.



Top brand component  
& chipset



Green low power  
design



Hundreds of classic  
arcade games




Super high video  
resolution



Fluent game control  
experience




## Package Listing

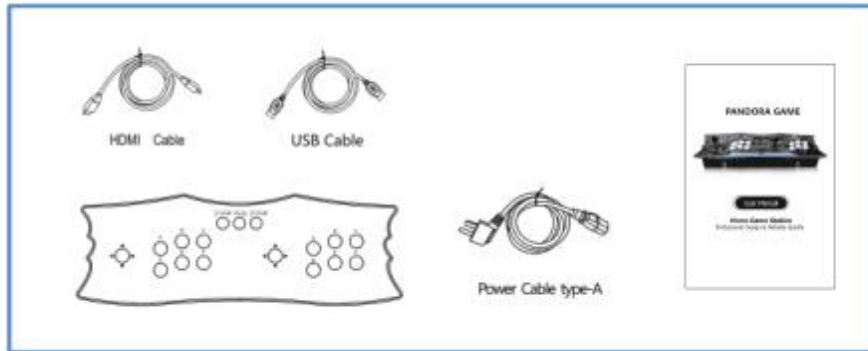

## HD

## HDMI Port

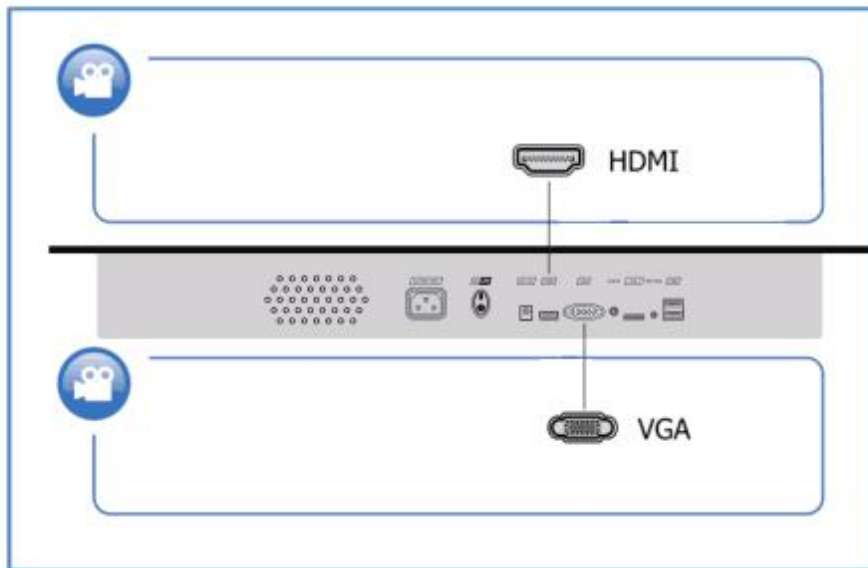



## Video & Audio Connection

### HDMI



Video with Embedded Audio

### VGA






## AC-220V



## Voice Control



## Joysticks & Buttons

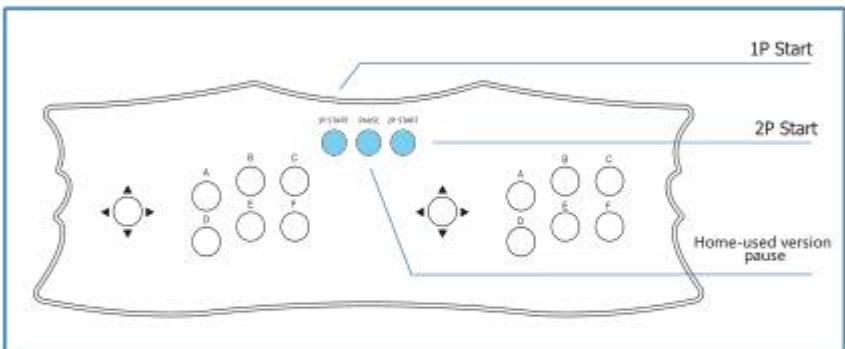



## System Settings

Please push the side tact switch to enter the system setting menu.



(1) **IO test:** Use this menu to test the working status of the coin selector, joysticks and buttons. (The color of the corresponding icon is initially blue, then turn yellow when press down, and then turn red when release)



(2) **Coin insert mode:** use this menu to set one coin game, 2coins game, ..., and 1P alternative funtion.

(3) **Exit mode:** use this menu to set how to exit from the current game. The user can choose exit from long pressing "EXIT"button or pressing "START" button with a coin insert event simultaneously.

(4) **Exit automatically:** if the game player is absent then the game itself will go to idle state, the system will exit the current game and go back to the initial demonstration interface after 3 minutes. However, the user can also choose "Exit automatically after 3 minutes" or "Never exit automatically".

(5) **Game selection mode:** 2 independent selection modes can be set in this menu bar.

A. Only enable game selection when a valid coin is accepted.

B. Without any limitation, enable game selection unconditionally.



## System Settings

### (6) Individual game setting.



A. Game difficulty level and life number setting. When the user pushes the A button in 1P console in the game setting menu, he can move the joystick to choose which game he needs to set, and use A button to change the difficulty level and B button to set initial life number. The life number setting will automatically disabled when the user chooses a game with no life number setting. In some cases, if the user needs to update all other game settings according to the current setting, he must push C button in the 1P console, and enable "Use the current setting for all other games". The user can still press D to return back.

### (7) Saving and Exit.

Once the mentioned operation is completed, please press D button continuously to go back to the initial game setting menu, and use the joystick to move the menu bar to the "Saving and exit" option, then press A button to confirm. The following dialog will pop up, and please DO NOT turn off the power, the system will reboot automatically.

### (8) Restore the factory settings and exit.

If you want to restore the factory settings, please choose the menu of "the factory setting and exit" and press the A button to make a confirmation.





### 按键接线定义说明

PS3	PC	pandora game	2P	1P	pandora game	PC	PS3
+5V	+5V	+5V	1	1	+5V	+5V	+5V
SELECT ■	J	NC	2	2	NC	J	SELECT ■
	I	NC	3	3	NC	I	
R2 ■	H	NC	4	4	NC	H	R2 ■
R1 ■	G	NC	5	5	NC	G	R1 ■
L2 ■	F	2P-F	6	6	1P-F	F	L2 ■
L1 ■	E	2P-E	7	7	1P-E	E	L1 ■
	D	2P-D	8	8	1P-D	D	
	C	2P-C	9	9	1P-C	C	
	B	2P-B	10	10	1P-B	B	
	A	2P-A	11	11	1P-A	A	
RIGHT	RIGHT	2P-RIGHT	12	12	1P-RIGHT	RIGHT	RIGHT
LEFT	LEFT	2P-LEFT	13	13	1P-LEFT	LEFT	LEFT
DOWN	DOWN	2P-DOWN	14	14	1P-DOWN	DOWN	DOWN
UP	UP	2P-UP	15	15	1P-UP	UP	UP
START ▶	START	2P-START	16	16	1P-START	START	START ▶
NC	NC	PAUSE	17	17	PAUSE	NC	NC
GND	GND	GND	18	18	GND	GND	GND
The handle switch			19	19	The handle switch		
	NC	NC	20	20	NC	NC	